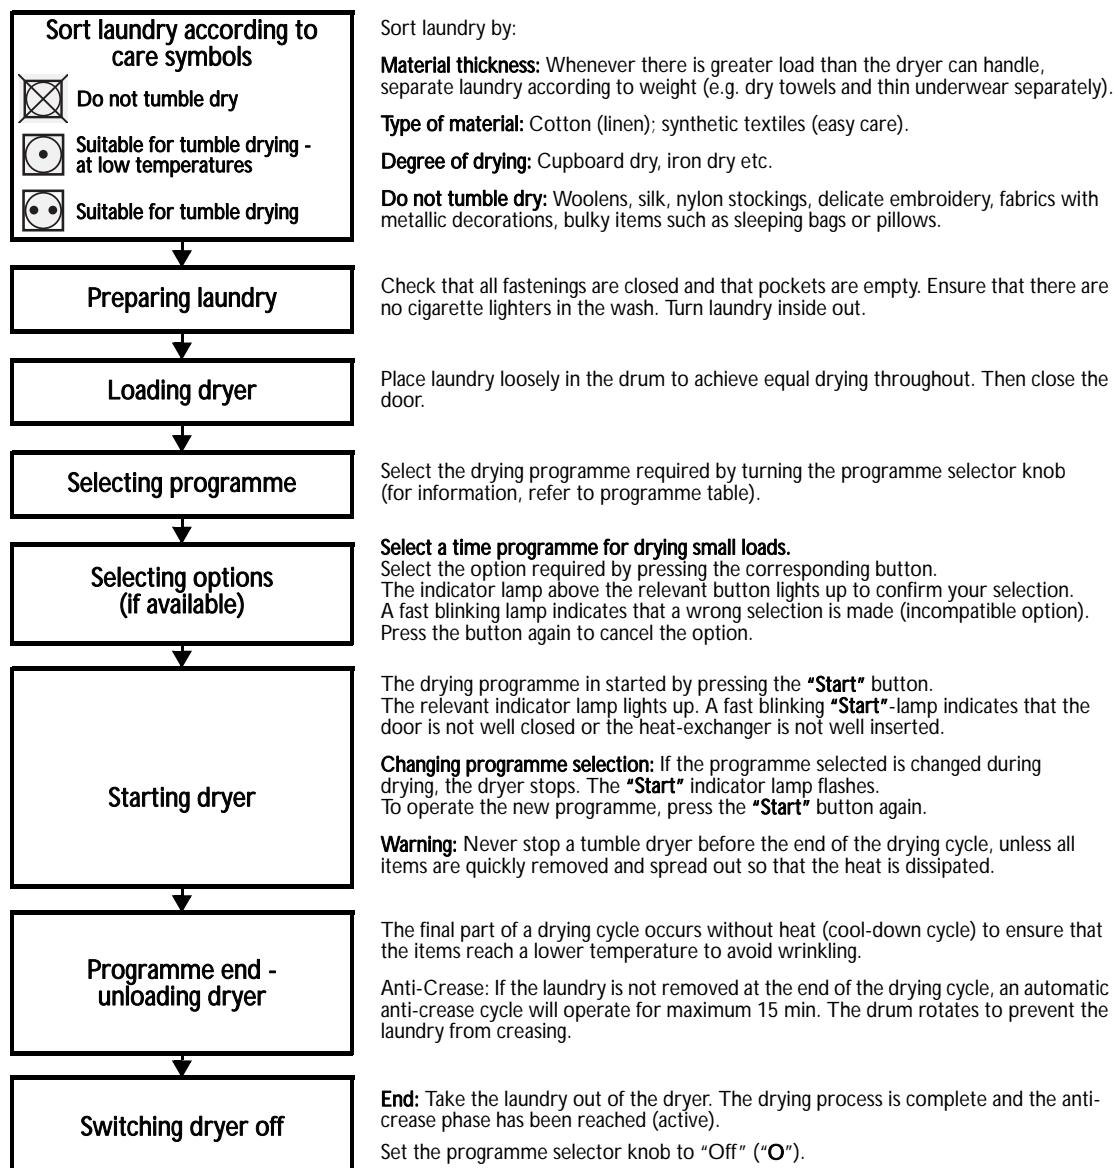


Machine operation

Additional information (including troubleshooting and service) can be found in the individual sections of the Instructions For Use.



Cleaning the lint filter: Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place (more detailed informations are given in the Instructions For Use).

Emptying the water container: Pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

Empty the water container after each drying process, because a full water container will stop the drying process before the laundry is dry.

Please note: Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

☞ Interrupting and restarting of the drying process prolongs the drying time significantly and can lead to overdrying.

| Overview of programmes | | | | | | Options | | | Approximate drying times (in minutes) | |
|--|--|-----------------|--|--|--------------------|---------|--------|---------------|---------------------------------------|--------------|
| Programmes / Drying levels | | | Type of textile | Fabrics | Volume of load kg* | Skånsom | Tørt + | Udskudt start | Very wet load | Wet load |
| Cotton  | Extra tørt | Extra dry | Multi-layered, thick laundry such as: terry towels, terry towelling bath robes. | Cotton or linen hot wash/ coloured laundry Bomuld Max. 6 kg | 3.0 6.0 | X | X | X | 115' 170' | 100' 150' |
| | Skabstørt | Cupboard dry ** | Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks. | | 3.0 6.0 | X | X | X | 100' 145' | 85' 125' |
| | Strygetørt 6Kg | Iron dry ** | Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes. | | 3.0 6.0 | X | X | X | 70' 110' | 60' 95' |
| Easy care  | Extra tørt | Extra dry | Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets. | Synthetic, mixed fibre or cotton easy care (ironing not required) laundry Syntetisk Max. 3 kg | 1.0 3.0 | X | X | X | 55' 75' | 45' 60' |
| | Skabstørt | Cupboard dry ** | Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear. | | 1.0 3.0 | X | X | X | 50' 65' | 40' 50' |
| | Strygetørt 6Kg | Iron dry | Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses. | | 1.0 3.0 | X | X | X | 35' 50' | 25' 40' |
| Special programmes  | Blandet tøj | Mixed load | T-shirts, blouses, towels, underwear, sportswear. | Cotton - Synthetic blend Blandet tøj Max. 3 kg | 3.0 | X | — | X | 110' | 95' |
| Airing | Laundry is aired, refreshed and bulked for 30 minutes without heating. | | All textiles. | Luftning | — | — | — | — | — | — |
| Drying times | 10' 20' 30' 40' 60' 90' | | Additional drying time for textiles that are not suitable for other programmes, for finalization of the drying process and for small loads (<1,0kg). | All fabrics Extra Skånsom | — | X | — | — | 10' 20' 30' 40' 60' 90' | |

* Weight of average and maximum load.

** Test programmes according to EN 61121, tested with maximum rated load capacity.

How to proceed if...

...you want to check the dryer yourself first: (If your machine is not functioning correctly, please check the following points before calling the Customer Service department - also refer to relevant chapter in the instructions for use).

| | | |
|---|---|--|
| Drying takes too long/ Laundry is not dry enough | → | <ul style="list-style-type: none"> Has the cycle been interrupted (door opening, full water container)? Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)? Is the lint filter dirty (filter indicator light on)? Is the heat exchanger dirty (for more information, refer to the Instructions For Use)? Is the room temperature too high? Is the "End" indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out. If the drying result does not meet your expectation, select a more dry programme or use the "dry plus" option (if available). Is thin and thick load mixed? Are different types of materials mixed? Sort the laundry after thickness and material and dry again. |
| The dryer does not operate (after a power failure, always press the "Start" button) | → | <ul style="list-style-type: none"> Is the plug properly inserted into the mains electricity socket? Is there a power failure? Has the fuse blown? Is the door properly closed? Has a drying programme been selected? Has the "Start" button been pressed? Has the start delay option been selected? Is the dryer overloaded? → Please remove some of the load. Is the heat exchanger inserted correctly? |
| Lint filter, water container indicator lamp on | → | <ul style="list-style-type: none"> Is the lint filter clean? Is the water container empty? Has the water container been inserted correctly? Is the heat exchanger clean and inserted correctly? |
| Water droplets underneath the dryer | → | <ul style="list-style-type: none"> Has the heat exchanger been inserted correctly? Have all fluffs on the heat exchanger seal and the door seal been wiped away? Has the water container been inserted correctly? If the direct drain connection is used, is it tight? Is the dryer levelled? |

 
 
 
 
 
...you want to care for and clean your dryer:

| | | |
|--|---|--|
| Clean the filter at the end of every cycle | → | <ul style="list-style-type: none"> Brush lint using a soft brush or your fingertips. Close the filter. Push the filter back into place. |
| Empty the water container at the end of every drying cycle | → | <ul style="list-style-type: none"> Pull the handle to remove the water container. Empty the water container. Replace the water container when empty by pushing it completely back into place. |
| Clean the heat exchanger at least once a month | → | <ul style="list-style-type: none"> Clean the heat exchanger under running water. Remove all fluffs from the seals. Clean the heat exchanger housing (for further information see chapter "Heat Exchanger" in the instructions for use). |

Failure codes

In case the appliance control unit detects a defective component or a malfunction of the dryer, it will stop the running programme and will make red lamps blinking.

The programme flow lamps will indicate the failure code, as in the table below:

| Failure code | Lamp failure code | Check needed by customer before Service call |
|--------------|---|--|
| F01 |  | |
| F02 |  | <ul style="list-style-type: none"> Turn the programme selector to the "off" position. Wait 1 minute. Turn the programme selector to the desired programme. Push the Start button. If the appliance will go again into Failure Mode. Call the After-Sales-Service. Check the programme flow lights and communicate the failure code. |
| F04 |  | |
| F07 |  | |
| F05 |  | <ul style="list-style-type: none"> Turn programme selector to the "off" position. Assure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Turn the programme selector to the desired programme. Push the Start button. If the appliance will go again into Failure Mode. Call the After-Sales-Service. Check the programme flow lights and communicate the failure code. |
| F06 |  | |

| | |
|---|---------------|
|  | Lamp blinking |
|  | Lamp on |
|  | Lamp off |



Indicator lamps



Programme selector knob

The drying programme is selected by turning this knob. The "Start" indicator lamp flashes.



"Start" button

The drying programme is started by pressing this button. The indicator lamp lights up.



Filter

The indicator lamp lights up when the filter and/or the heat exchanger including housing needs to be cleaned.

Clean the filter at the end of every drying cycle.



Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying programme.

Empty the water container after every drying cycle.



End

The drying programme is finished. The antcrease has been reached. Please unload the dryer.



Overdry protection

The indicator lights up when a humidity controlled programme is selected, to indicate the activated protection function.

Skånsom



Gentle

Selecting this option will reduce the drying temperature.



Dry plus

By selecting this option you can increase the dryness level of the laundry.



Start delay

Delays the start of the drying cycle by 3, 6 or 9 hours. Each time the button is pressed the delay is increased by 3 hours. Press the "Start" button to confirm the final selection and to start the dryer. During the countdown, the drum will turn from time to time to redistribute the laundry and the pump will start to pump water in the water container. To cancel or change the previously set time delay, set the index of the programme selector knob to the "off" position, or open the door.